


# ASIAIR Plus

 
## 快速使用指南

V1.2

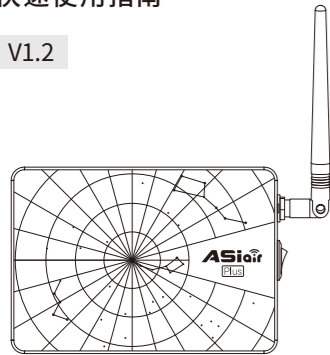

### 1. 安装 App, 连接 ASIAIR 电源并开机


用 12V@5A 电源适配器连接 ASIAIR Plus 盒子至电源插座

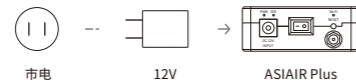

市电

12V

 ASIAIR Plus

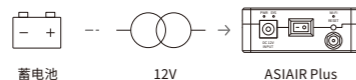

蓄电池

12V

ASIAIR Plus

用设备扫描下方二维码或至应用商城下载 ASIAIR App



### 2. 连接 Wi-Fi 热点

将设备连接至 ASIAIR Plus 热点网络(ASIAIR\_xxxxxxx), 输入初始密码 12345678, 然后打开 ASIAIR App



### 3. 激活 ASIAIR Plus

按照 App 提示, 完成激活 (仅在首次连接时操作)

#### #iPhone、Android

确保移动设备连接 ASIAIR Plus 热点网络的同时打开移动网络, 可直接完成在线激活

#### #iPad、Tablet (无线局域网机型)

因以上设备无法在连接至 ASIAIR Plus 热点的同时上网, 所以在激活过程中需要切换2次网络

①. 进入 App 激活页面后, 切换设备网络至互联网, 返回 App, 按照提示轻触“在线获取授权码”

②. App 提示“授权码获取成功”后, 切换设备网络至 ASIAIR Plus 热点, 返回 App, 轻触“激活”完成操作

 
### 4. 连接数据线



将主相机和U盘连接到 ASIAIR 底部 USB 3.0 接口





将导星相机和赤道仪连接到 ASIAIR 底部 USB 2.0 接口

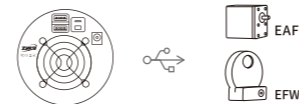

将 EAF 和 EFW 连接到主相机 USB HUB 接口

### 5. 连接电源线

将 ASIAIR 的电源输出口连接至主相机、除雾加热带和赤道仪

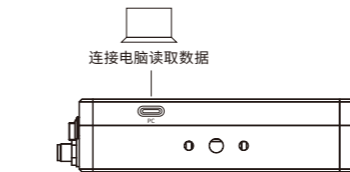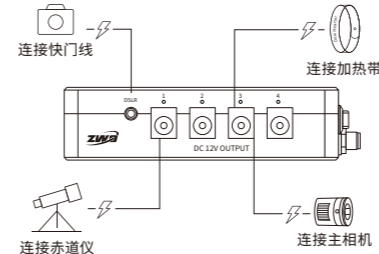

注意区分输电线的长度, 避免赤道仪旋转时缠绕

### 6. 打开 ASIAIR App, 开启你的拍摄之旅吧



### 7. 物品清单



ASIAIR Plus 本体

ASIAIR Plus 快速指南



DC 1.5m 公对母电缆  
延长线# x1

DC 1m 公对公电缆线# x2



DC 0.5m 公对公电缆线# x2

USB 3.0 方口数据线  
(0.75m) x1

#标注 线缆均为 5.5\*2.1mm 规格

### 8. 注意事项

1. 在线激活仅在首次连接 ASIAIR Plus 时操作
2. ASIAIR Plus 激活过程中, 请勿将 ASIAIR App 置于后台或关闭, 请勿切断 ASIAIR Plus 供电

### 9. 联系我们 & 获取帮助



扫码联系我们



扫码关注公众号




ZWO 官方网址

苏州振旺光电有限公司  
电话: +86 0512 65923102  
官网: <https://www.zwoastro.cn>  
QQ群: 292736278 (ZWO 天文摄影群)  
新浪微博: <https://weibo.com/wenjha>

# ASIAIR Plus


## Quick Guide

V1.2

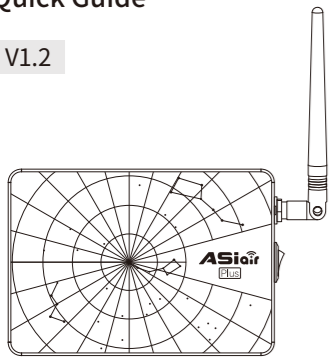

### 1. Install the ASIAIR App from the store

 
Power ASIAIR Plus with a 12V@5A power adapter.

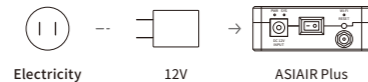

Electricity

12V

 ASIAIR Plus

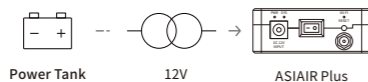

Power Tank

12V


ASIAIR Plus

Scan the QR code below or search ASIAIR in App Store/Google Play to download the App.



### 2. Connect to Wi-Fi network

Connect the device to the ASIAIR Wi-Fi (ASIAIR\_XXXXXXX), Enter the initial password 12345678, then launch the App.

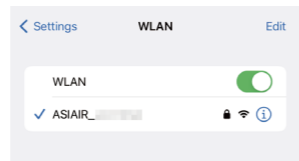

### 3. Activate ASIAIR Plus

Follow the App prompts to complete the activation. (Online activation is only required when you first launch the ASIAIR App.)

#### #iPhone & Android Phone

Make sure your phone can still access the internet when it is connected to ASIAIR Wi-Fi, then you can accomplish the online activation directly.

#### #iPad & Tablet (Wi-Fi models)

Devices above cannot access the Internet while connecting to the ASIAIR Wi-Fi, so you need to switch the device network twice during the activation.

①. After entering into the activation page, switch your network to the Internet and tap "Get Authorization Code".

②. After the app prompts "Authorization code has been obtained", switch your network to ASIAIR Wi-Fi, return to the App and tap "activation" to complete online activation.

### 4. Connect USB devices



Connect the main camera and USB memory stick to the USB 3.0 interfaces of ASIAIR Plus.





Connect the guide camera and mount to the USB 2.0 interfaces of ASIAIR Plus.



Connect EAF and EFW to the main camera's USB HUB.

### 5. Connect power cables

Connect power to your main camera, dew heater straps and mount.

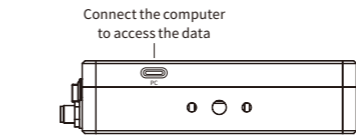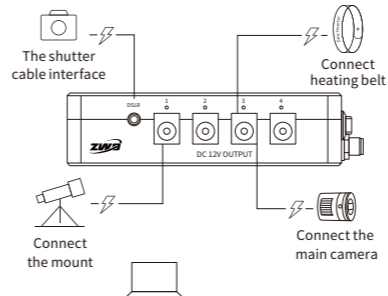

Pay attention to the length of your power cables to avoid cable snags while slewing which could damage your devices.

### 6. Launch ASIAIR App to start your astrophotography journey!



### 7. In the box



ASIAIR Plus

Quick guide



DC 0.5m cable# x2



DC 1.5m male-female extension cable# x1

USB 3.0 0.75m Type-B data cable x1

#All power cables are 5.5mm\*2.1mm standard.

### 8. Notes

1. Online activation is only required when you first launch the ASIAIR App.

2. During the activation process, don't keep it in the background or close it, nor cut off the power of the ASIAIR device.

### 9. Contact us & Get help



Scan to visit our website

Official website: <https://zwoastro.com>

Facebook: <https://www.facebook.com/zwoastro/>

Instagram: <https://www.instagram.com/zwoastro/>

Twitter: <https://twitter.com/zwoastro>

Tel: +86 0512 65923102