

How to Restore the ASIAIR OS

Preparation

- 1 A new MicroSD card and a Card Reader.
- 2 Download the ASIAIR system zipped image file from the Google Driver, for <u>ASIAIR</u> or for <u>ASIAIR PRO</u>, and unzip it to an image file.
- 3 Software recommended:

Platforms	Recommended
Windows	Win32 Disk Imager
Mac	ApplePi-Baker
Linux	"dd" command or the GUI tool Etcher

Restore the ASIAIR OS

Windows: Insert the new MicroSD card into computer USB interface via a card reader.

- 1 Run the Win32 Disk Imager, click on its interface to select the image file that just unzipped.
- 2 Under the **Device** label of the Win32 Disk Imager software



interface, select the MicroSD card drive latter.

3 Click Write to start. It would take 30 to 40 minutes.



4 After restoring, plug back the MircoSD card in ASIAIR device and power up, connect to its WiFi on the app.

Mac: It is recommended to use ApplePi-Baker.

Linux: You can use the "dd" command. or Etcher.

Authorization

Authorize Online (Internet access is required): Tap Authorize Online



and AISIAIR will automatically complete the authorization.



Scan License QR Code (No Internet access is required): Tap **Scan from Album** or <u>obtained online</u>, then scan to authorize.

